



# SIEMENS

Be inspired

Issued by  
Information and Communication mobile  
Haidenauplatz 1  
D-81667 Munich

© Siemens AG 2002  
All rights reserved. Subject to availability.  
Rights of modification reserved.

Siemens Aktiengesellschaft  
[www.my-siemens.com](http://www.my-siemens.com)



# A50



cyan magenta yellow black

<b>Safety precautions .....</b>	<b>3</b>	<b>Message (SMS) .....</b>	<b>27</b>
<b>Overview of the phone.....</b>	<b>4</b>	Read Messages .....	27
<b>Getting Started .....</b>	<b>5</b>	Inbox/Outbox .....	28
Insert SIM card/battery .....	6	Compose a message .....	29
Charge battery .....	7	Predefined text .....	30
<b>General instructions .....</b>	<b>9</b>	SMS to group.....	30
User Guide.....	9	Picture & Sound (EMS) .....	30
Menu control .....	9	Text entry with "T9" .....	31
<b>Switch on, off/PIN entry .....</b>	<b>10</b>	Setup .....	34
<b>Security .....</b>	<b>11</b>	<b>Surf &amp; fun .....</b>	<b>35</b>
<b>Making a phone call .....</b>	<b>12</b>	Internet (WAP) .....	35
Dialling with number keys .....	12	Games .....	40
End call .....	12	Bitmap viewer.....	41
Accept call .....	12	Melodies .....	42
Reject call .....	12	<b>Voice message/Mailbox .....</b>	<b>43</b>
When a number is busy.....	13	<b>Cell broadcast.....</b>	<b>44</b>
Redial previous numbers .....	13	SIM services (optional).....	45
During a call .....	14	<b>Records .....</b>	<b>46</b>
Swap/Conference .....	15	Missed calls .....	46
Send DTMF tones .....	16	Calls received.....	46
Babysitter .....	17	Calls dialled .....	46
<b>Phonebook.....</b>	<b>18</b>	<b>Duration/charges .....</b>	<b>47</b>
<New entry> .....	18	Display .....	47
Call/search for an entry .....	20	Charge settings.....	47
Group.....	21	<b>Divert .....</b>	<b>48</b>
Record no.: .....	25	<b>Clock.....</b>	<b>50</b>
Store control code .....	25	Alarm clock .....	50
Picture .....	26	Time/date .....	50
		Format date .....	50
		Auto display .....	50
		Auto phone off.....	50

**See also Index  
at the end of this User Guide**

<b>Profiles .....</b>	<b>51</b>	<b>Display symbols (selection) .....</b>	<b>63</b>
Setup .....	51	<b>Questions &amp; Answers .....</b>	<b>64</b>
Aircraft mode.....	52	<b>Siemens Service.....</b>	<b>67</b>
<b>Fast access key .....</b>	<b>53</b>	<b>Specifications/maintenance .....</b>	<b>68</b>
Left soft key .....	53	<b>Accessories .....</b>	<b>69</b>
Speed dialling keys .....	54	Basics .....	69
<b>Audio .....</b>	<b>55</b>	Car Solutions .....	69
Ringer setting .....	55	<b>Personalisation.....</b>	<b>70</b>
Volume .....	55	<b>SAR (European Union).....</b>	<b>71</b>
Ring tones .....	55	<b>SAR (international).....</b>	<b>72</b>
Call screening .....	55	<b>Index .....</b>	<b>73</b>
Silent alert.....	56		
Key tones.....	56		
Minute beep .....	56		
Info tones .....	56		
<b>Setup .....</b>	<b>57</b>		
Language .....	57		
Display .....	57		
Status .....	58		
T9 input.....	58		
Security.....	58		
Network.....	59		
During a call .....	61		
Headset .....	61		
Car Kit.....	62		

**See also Index  
at the end of this User Guide**



Switch off in hospitals or in the vicinity of medical devices, e.g. hearing aids. You should keep a minimum distance of 20 cm between a pacemaker and mobile phone. When using the mobile phone, hold it to the ear which is furthest away from the pacemaker.



Always use the handsfree kit for calls while driving (p. 69).



Mobile phones must be switched off at all times in an aircraft. To prevent accidental activation, see (p. 52).




Switch off near petrol stations, fuel depots, chemical plants or blasting operations. Mobile phones can interfere with the operation of technical installations.



The ring tone is reproduced through the earpiece. To avoid damage to hearing, first accept the call, then hold the phone to the ear.



SIM card may be removed. Caution! Small parts could be swallowed by children.

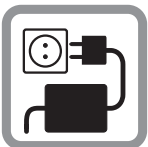

The mains voltage specified on the power supply unit must not be exceeded.



We recommend you use only original Siemens batteries (100% mercury-free) and charging devices. Otherwise considerable health risks and damage to the product cannot be excluded.



Neither the phone nor the battery (100% mercury-free) may be opened under any circumstances (except when exchanging the battery, SIM card or top shell). Any other changes to this device are strictly prohibited, as they will invalidate the type approval criteria required for operation of the unit.

## Please note



Dispose of used batteries and phones according to the legal regulations.



Mobile phones can interfere with the operation of nearby TVs, radios, PCs.



We recommend you use only original Siemens accessories to avoid possible damage and to comply with the existing regulations.

Improper use invalidates the warranty!

# Overview of the phone

## Loudspeaker

## Display indicators

Signal strength/  
battery level.

## Call key

Select displayed phone  
number or name, accept  
calls. Display last calls in  
standby mode.

## Phonebook key

Press once for Phonebook  
Press twice for Groups


## \* Hold down.

## In standby mode


Switch signal tones on and  
off.

## Microphone

## Soft keys

The current functions of these  
keys are displayed in the  
grey fields as text or icons.  
These keys display the quick  
selection in standby mode  
(factory default: **New SMS**)  
or e.g.  (SIM service)  
and **Menu**.

## Integrated antenna

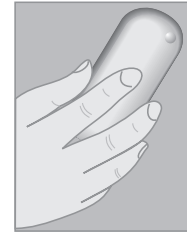

Do not interfere with the  
phone above the battery  
cover unnecessarily. This  
reduces the signal strength.



## On/Off/End key

### Press briefly:

End call/function and return  
to standby mode. In menus:  
one menu level back.

### Hold down:

Switch on/off phone  
(in standby mode).


## Key lock

To switch on and off:

 Hold **down**

## Device interface

Connection for charger,  
headset etc.

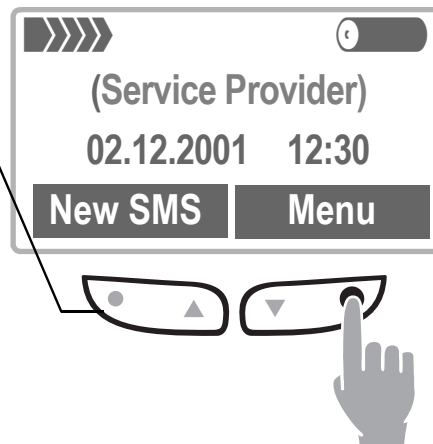


To call up a function dis-  
played, press the soft key un-  
derneath the function on the  
**outside**.

Example: Press the right soft  
key on the **outside** to call up  
the menu.


Press the soft keys **inside** to  
scroll through menus and  
lists.

The front and back covers of the casing (CLIPit™ Covers p. 69) can be changed in a matter of seconds - no tools required. Please switch the phone off first:

## To attach

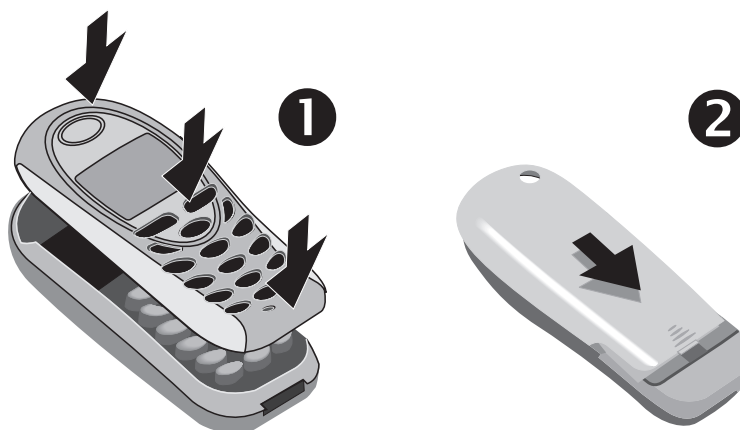

## To remove

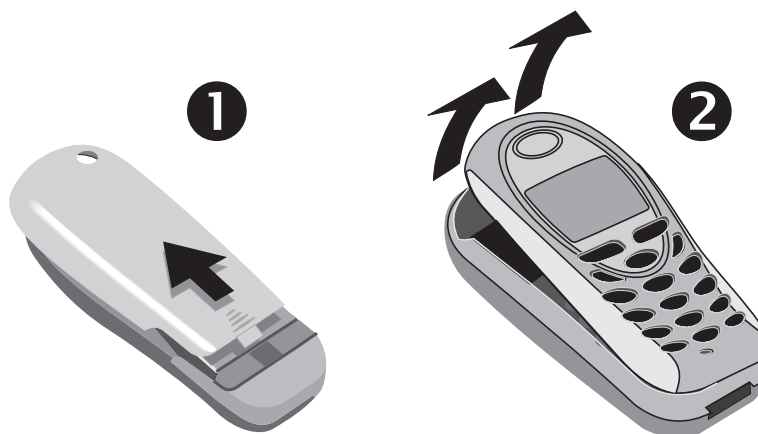


Your phone's display and the display cover of the upper shell are delivered with a protective film. **Remove this film before getting started.**

In rare cases the static charge created by removing this film may cause discolouration at the edges of the display. However, this will disappear within 10 minutes.


## Insert SIM card/battery

The service provider supplies you with a SIM card on which all the important data for your line is stored. If the SIM card has been delivered in credit card size, snap the smaller segment out and remove any rough edges.


- Press grooved area **1**, then lift cover **2**.

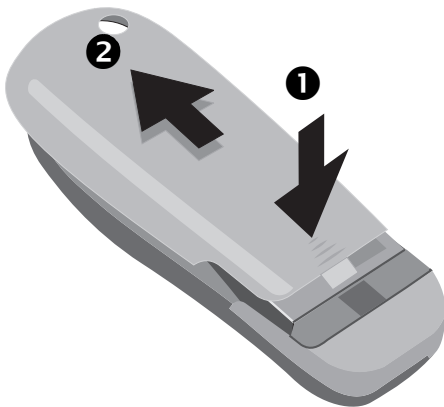


- Press latch in the direction indicated by the arrow **3**, Lift battery at the cutout on the side of the phone **4**, then tilt upwards and remove.

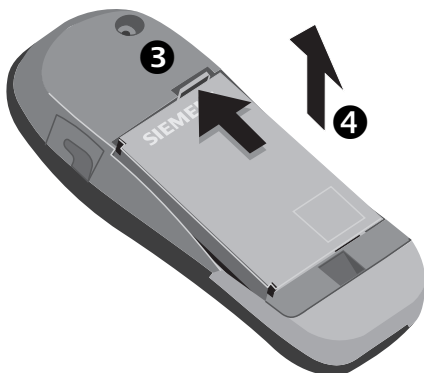

- Insert SIM card in the opening (contacts pointing downwards) and push gently until it engages (make sure the angled corner is in the correct position **5**).

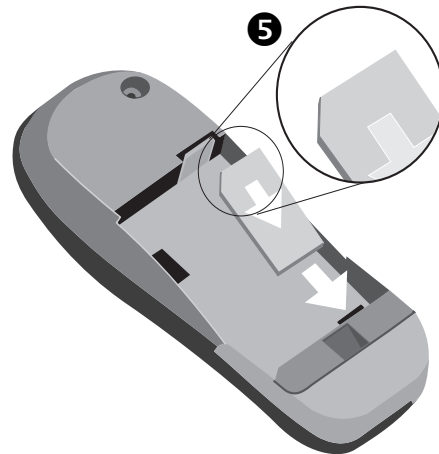

- Insert battery into the phone sideways **6**, then press downwards **7**, until it engages.

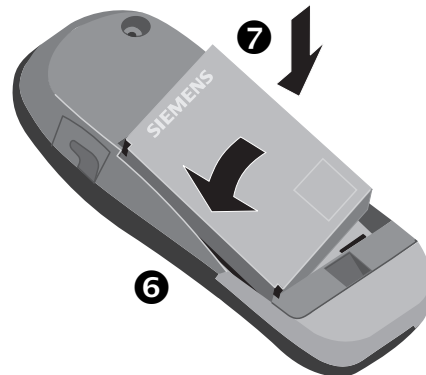

- Replace cover and press downwards until it engages.

Only 3-Volt SIM cards are supported. Older SIM cards (5-Volt technology) cannot be used. Please contact your service provider, if you have an older card.

## Charge battery


The battery is not fully charged when delivered, so:

- Plug in charger cable at the bottom of the phone, plug in the plug-in power supply unit to the mains power socket and charge for at least two hours.

If the battery is totally discharged no charge icon is displayed at the beginning of the charging process.

If this is the case leave the charger cable plugged in, the charge icon will appear after a maximum of 2 hours. The battery is then automatically charged.

- Push the sides of the charger cable plug together and pull to remove it.

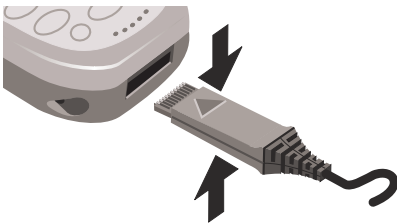

## Functions without SIM card

To display the functions that can be used without SIM card, switch on the phone **without** the SIM card:


**Menu** Press soft key.

Special case:

**SOS** Emergency number, SOS (p. 10).

### Charging

The charger heats up when used for long periods. This is normal and not dangerous.

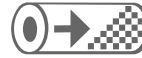

When charging is in progress.



End of charging.

An empty battery is fully charged after about 2 hours. Charging is only possible in an ambient temperature of 5 °C to 40 °C (the charge icon flashes as a warning when the temperature is 5 °C above/below this range). The voltage specified on the power supply must not be exceeded.

### Operating times

A fully charged battery provides 60-250 hours of standby time or 100-300 minutes of talk time. The operating times are average values and depend on the operating conditions (see table below).

Charge level display (full-empty):



A beep sounds when the battery is nearly empty.

Operation carried out	Time (min)	Decrease of standby time by
Calling	1	30 to 60 minutes
Display back light *	1	30 minutes
Network search	1	5 to 10 minutes
* key input, games, organiser etc.		








**Quality declaration for battery**

The capacity of your mobile phone battery reduces each time you charge/discharge it. Storing the battery at temperatures that are too high or too low also causes a gradual loss of capacity. This can cause the operating times of your mobile phone to reduce significantly per usage cycle.

The battery is, however, designed to be charged and fully discharged within a period of six months from when the mobile phone was purchased. Following this six-month period we recommend replacing your battery if you experience a significant drop in performance. Please purchase only Siemens original batteries.

## User Guide






The following symbols are used:

	Enter numbers or letters.
	On/Off/End key.
	Call key.
	Press on the inside to scroll.
	Press on the outside to call a function (soft key).
	Displays a soft key function.
	Function depends on the service provider, special registration may be necessary.

Steps for calling a function as described in this User Guide, e.g.:

**Menu** → **Audio** → **Volume**

The procedure above corresponds to:

-  Press soft key.
-  Scroll to **Audio**.
-  Select **Audio**.
-  Scroll to **Volume**.
-  Select **Volume**.

The font size of the display in your telephone has been set to Big letters (p. 57). The pictures in this user guide show the display texts in the smaller font size.


## Menu control

The menus provide access to functions, network services and individual settings.

### Main menu


To reach the main menu from standby mode:

Press the right key on the outside right (soft key).

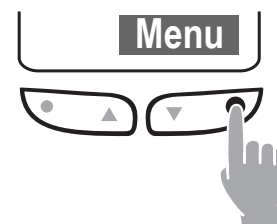


### Menu control

Press those two keys on the inside to scroll up and down in menus and lists.

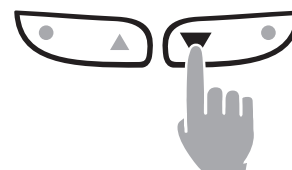

To carry out the function selected: Press the right key on the outside right.

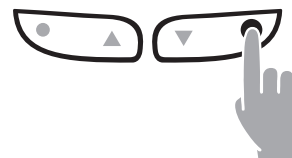

### Option menu

In other situations (e.g. when the Phonebook is open) a corresponding option menu appears:

**Options** Press.

## Switch on, off



Hold **down** On/Off/End key to switch on or off.

## Enter PIN

The SIM card can be protected with a 4-8 digit PIN.




Enter your PIN code using the digit keys (shown a series of asterisks; if you make a mistake, press **Clear**).



**OK**

Confirm input with the right key (press on the outside).

Logging on to the network will take a few seconds.

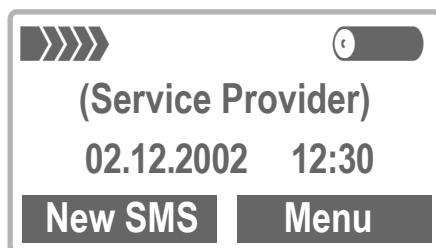

When the name of the service provider appears on the display, the phone **is in standby mode** and **ready for use**.

### Emergency number (SOS)

By pressing the soft key **SOS** you can make an emergency call on any network without a SIM card and without entering a PIN (not available in all countries). **This must only be used in real emergencies!**

### PIN problems

If the PIN is entered incorrectly three times the SIM card is barred (p. 11).

Activate, deactivate PIN control or change PIN (p. 11).

### SIM problems

If **"Please insert SIM card"** is displayed, check for faults (p. 64).

### Network connection



Strength of incoming signal.



A weak signal reduces the call quality and may lead to loss of the connection. Change your location.

If you are outside your "home network" your phone automatically selects a different GSM network (p. 59).

### SIM services



Symbol for special applications on the SIM card (p. 45), e.g. Mobile Banking.

The phone and SIM card are protected against misuse by several security codes and should be treated with the same care as a cheque guarantee card. For further details see also p. 59.

**Keep these confidential numbers in a safe place where you can access them if required.**

<b>PIN *</b>	Protects your SIM card (personal identification number).
<b>PIN 2 *</b>	This is needed to set the charge detail display and to access additional functions on special SIM cards.
<b>PUK/ PUK 2</b>	Key code. Used to unlock SIM cards after the wrong PIN has been entered.
<b>Phone-code *</b>	Protects your phone. Must be entered at the first security setting.

**Menu** → **Setup** → **Security**  
→ then select a function:

## PIN control

The PIN is usually requested each time the phone is switched on. You can deactivate this feature but you risk unauthorised use of the phone.

**Select** Press.



Enter PIN.



Confirm entry.

**Change**

Press.



Confirm.

Some service providers do not permit this function.

## Change PIN \*

You can change the PIN to any number you may find easier to remember.



Enter **old** PIN.



Press.



Enter **new** PIN.



Repeat **new** PIN.

## Change PIN2 \*

(display only if PIN 2 is available).  
Proceed as with **Change PIN**.

## Change phonecode \*

You define and enter the phone code when calling up a phone code protected function (e.g. **Babysitter**, p. 17) for the first time. It is then valid for all functions.

If you have forgotten it, please call Siemens Service (p. 67).

### Remove SIM card barring

If the PIN is entered incorrectly three times the SIM card is barred. Enter the PUK (MASTER PIN) provided by your service provider together with the SIM card according to instructions.

If PUK (MASTER PIN) has been lost, please contact your service provider.

\* 4-8-digit number

## Dialling with number keys

The phone must be switched on (standby mode).



Enter the number (always with prefix, if necessary with the international dialling code).

**Clear** A **short** press clears the last digit, a **long** press clears the entire number.



Store phone number in the Phonebook (p. 18).



Press the Call key. The phone number displayed is dialled.

### International dialling codes

Many international dialling codes are stored in your phone:



Hold **down** until "+" appears. This replaces the first two digits of the international dialling code.



Press.

Select the required country. The international dialling code is displayed. Now add the national number (in many countries without the first digit) and press the Call key.

## End call



Press the End key **briefly**. The call is ended.


Press this key even if the person on the other end of the line has hung up first.

## Accept call



The phone must be switched on (standby mode).



**Reply** Press **or**  press again.

A phone number is transmitted by the network and displayed. If it is stored in the Phonebook the corresponding name is displayed.

## Reject call



**Reject** Press **or**



press **briefly**.




**Divert** Diverts the caller to the mailbox, for example, if **Busy** is set (p. 48) and "call waiting" has been activated (p. 14).

## When a number is busy

If the called number is busy or cannot be reached because of network problems the following options are available (depending on service provider):

**Either**

### Auto redial previous numbers

**Auto dial** Press. The number is automatically dialed for up to 15 minutes at increasing intervals. During this period, no other number can be dialed. To end: Press  (End key).

or

### Call back







**Call back** Press. Your phone rings when the busy number is free. Press the Call key to dial the number.

### Reminder

**Prompt** Press. A beep reminds you to redial the displayed phone number after 15 minutes.

Any other call ends the function.

## Redial previous numbers

- To redial the phone number **last** called:  
 Press the Call key **twice**.
- To redial other numbers that were dialed previously:  
 Press the Call key once.  
 Pick out the required phone number from the list, then press ...  
 ... to dial.

### Options Call lists (p. 46).

The numbers of calls that have been received, dialed or missed are stored for call back purposes (p. 46).

An incoming call will interrupt any other use of the phone.

Functions during a call (p. 14).

Switch off ringer for the current call:



Hold **down**.

The call is displayed. The caller hears the dialling tone.

## During a call

### Call waiting



You may need to register for this service with your service provider and set your phone accordingly (p. 61).

During a call, you may be advised that there is another call waiting. You will hear a special tone during the call. You have the following options:

### Swap

**Swap** Accept the waiting call and place the current call on hold.

To swap between the two calls, press **Swap** each time.

### Reject

**Reject** Reject the waiting call. The caller will hear the busy tone

or

**Divert** if this is set, the caller will be diverted to the mail-box for example (p. 48).

### End current call



End the current call.

**Reply** Accept the new call.

### Set Volume



You can adjust the handset volume with the arrow keys (only during the call).

If a car kit is used, its volume setting does not affect the usual setting on the phone.

### Phone number memo

You can dial a number with the keypad during a call. The person on the other end of the line can hear the number being entered. It can be stored in the Phonebook or called after the current call has ended.


## Swap/Conference

Some functions may not be supported by your service provider.

You can call another number during a call.

You can swap back and forth between both calls or link all callers together in a conference.

During a call, inform the other party of your intention, then:

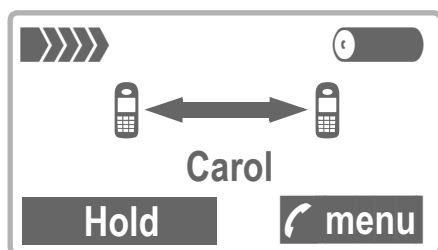

**Hold** Put the current call on hold.

You can now dial a new number. When the connection is established, you have the following options:

### Swap

**Swap** Swap back and forth between both calls.



End the current call.

The following query is displayed:

"Return to the call on hold?"

**Yes** Return to the held call

or

**No** The held call is ended.

## Conference

**menu** Open call menu and select **Conference**.

A held call is added (conference call with up to 5 subscribers).

To end:



All calls are ended simultaneously when the End key is pressed.

## Call transfer



**menu** Open call menu and select **Call transfer**.

The original call is joined to the second one. For you, both calls are now ended.

## Call menu

The following functions are only available during a call:

 **menu** Open menu.

<b>Microphone on</b>	Switch the microphone on or off. If switched off, the person on the other end of the line cannot hear you (muting). Alternatively:  Hold <b>down</b> . However, numbers being entered are audible when <b>Send DTMF tones</b> is active.
<b>Volume</b>	Adjust handset volume.
<b>Conference</b>	(p. 15).
<b>Duration/charges</b>	While the connection continues, the call duration and (if set, see p. 47) the charge details are displayed.
<b>Send DTMF tones</b>	See right.
<b>Call transfer</b> 	(p. 15).
<b>Main menu</b>	Direct access to the main menu.
<b>Call status</b>	List all held and active calls (e.g. participants in a conference).

## Send DTMF tones

 **menu** Open menu.

### Send DTMF tones


Select.

You can enter control codes (digits) during a call so that an answering machine can be controlled remotely. These digits are directly transmitted as DTMF tones (control codes).

Control codes (DTMF tones) stored in the Phonebook (p. 18) can also be entered.

## Babysitter

Only **one** phone number can be dialled. Hold **down** the right soft key on the outside right.

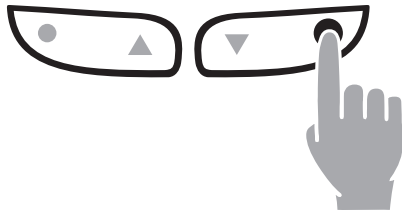

## Switch on



**Menu** → **Setup** → **Security**  
→ **Babysitter**

**Select** Press.

 Enter phone code (see instructions on the right).


**OK** Confirm input.

**Change** Press.

  Select phone number from the Phonebook (p. 18) or enter a new one (with name). The babysitter is now active.

## Switch off

 Hold **down**.

 Enter phone code.

**Change** Press.

**OK** Confirm input.

### Phonecode

When first prompted, you define and enter the phonecode (4-8 digits) (e.g. for **Babysitter**).

**Please do not forget this code!**

It applies to other functions as well but it may be changed at any time (p. 11).

Enter frequently used phone numbers in the Phonebook with a special name. To dial then, simply highlight the name. If a phone number is stored with a name, it appears on the display when you are called. You can assign important phone numbers to a **group**.

## <New entry>



Open Phonebook.

Select.



Activate input fields.



Enter phone number (with prefix) and name (for additional fields/input aid, see adjacent column).



Press to store the entry.

## Additional fields

### Group

Assign the entry to a group, for example:

**Office, Family, Leisure, VIP**

(see group functions, p. 21).

### Location:

Select a storage location other than the SIM card (standard) such as phone memory or special SIM card (p. 24).

### Record no.: (storage location number)

Every entry is automatically assigned a number under which it can also be selected. For information on how to change the number, see (p. 25).


## Input aid

If the cursor is in the **input field**

<**Phone number**> you can use the left soft key to display a list with international dialling codes.



Press. Select the required country. The international dialling code is displayed.

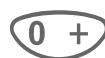


**Hold down** key until a "+" appears. This replaces the two leading digits of the international dialling code.

### <Own numbers>

You can enter your "own" numbers (e.g. fax).

## Text entry


Press digit key repeatedly until the required letter is displayed. The cursor advances after a short delay.

 **Press** once for **a**, twice for **b** etc. The first letter in each name is automatically written in UPPERCASE.

**Ä,ä/1-9** Umlauts and numbers are displayed after the relevant letter.

**Clear** Press briefly to delete the letter before the cursor, hold down to erase the whole name.

  Move the cursor.

 **Press briefly:**  
Switch between uppercase, lowercase and digits.


**Hold down:**  
Set input language and text mode.





 Activate/deactivate T9.

 Write: . , ? ! 0 + - :



 Space.

## Special characters

Press key repeatedly until the character is displayed. To enter special characters after numbers (e.g. 5 £), switch to the letter mode first: 

	Blank	1	€	£	\$	¥	¤		
	.	,	?	!	0	+	-	:	¿
	*	/	(	)	<	=	>	%	~
	#	@	\	&	§	Γ	Δ	Θ	Λ
	Ξ	Π	Σ	Φ	Ψ	Ω			

## Call/search for an entry

-  Open Phonebook.
-  Select a name by entering the first letter (search function) and/or scroll.

<Group>

Carol

Diana

View

Options

-  Dial number.

## Phonebook-Menu

<b>Options</b>	Open menu.
<b>View</b>	Display the selected entry.
<b>Edit</b>	Display phone number and name for changes.
<b>New entry</b>	Create a new Phonebook entry.
<b>Delete</b>	Delete entry selected from the Phonebook.
<b>Delete all</b>	Delete all entries after confirmation. Depending on the storage location of the entries, the PIN, PIN 2 or the phone code may also be requested.
<b>Send SMS...</b>	<b>as entry</b> Send a Phonebook entry. <b>as text</b> Send entry as a text of an SMS message.
<b>Picture</b>	Assign a symbol to a phone number (p. 26).
<b>Capacity</b>	Display the maximum and available capacity.

## Group

If there are many Phonebook entries it is best to assign them to a group, e.g.:

### Office, Family, Leisure, VIP

A special melody can sound (p. 55) and/or a symbol can be displayed (p. 26) if the phone number of a call is registered in a group.


## Select a group



Two short presses **or** one long press on Phonebook (in standby mode).



Select group.

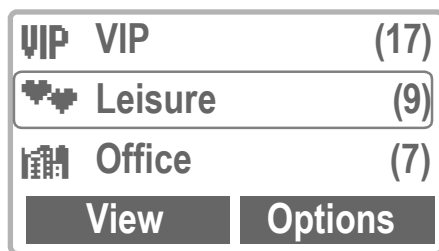

### View

Press. All entries of the selected group are displayed.

The following functions are applied to the group or all entries of a group:

## Group Menu

### Options

Open menu.

<b>View members</b>	Display all entries assigned to the group.
<b>Rename group</b>	Change the current name of the group.
<b>Remove all</b>	Remove all members from the selected group.
<b>Group symbol</b>	Assign a symbol to a group (p. 26).
<b>Call to group</b> 	Call up to 5 members of a group one by one and link them together in a conference (p. 23).
<b>SMS to group</b>	Send an SMS to all members of a group (p. 22).

## Change group assignment

You can assign a Phonebook entry to a group when you enter it (p. 18). To change the group assignment or to assign to a group later:

When the Phonebook is open:



Select entry.

### View

Press.

### Edit

Press.



Scroll to Group.

### Edit

Press and select a new group.

### Save

Confirm assignment.

## Group entry menu

**Options** Open menu.

<b>View</b>	Display the entry.
<b>Edit</b>	Display the entry for changes.
<b>New entry</b>	Open Phonebook and add an entry to the current group.
<b>Remove</b>	Delete entry only from the group.
<b>Send SMS...</b>	<p><b>as entry</b> Send a Phonebook entry.</p> <p><b>as text</b> Send entry as text of an SMS message.</p>
<b>Picture</b>	Assign a symbol to a phone number (p. 26).



### Phonebook key

Press once to open Phonebook

Press twice to display groups

Press 3 times to display 1st group entries

## SMS to group


A memo (SMS) can be sent as a circular to all members of a group.



Two short presses **or** one long press on Phonebook (in standby mode).



Select a group.

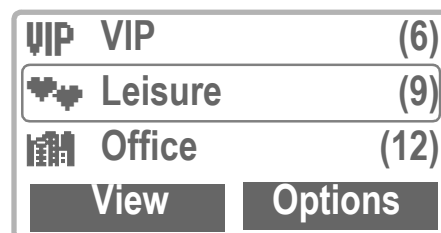

**Options**

Press. The group is confirmed and the editor is opened.



Compose message (p. 29).



Press and confirm the displayed group with **OK**.



Press. The first recipient is displayed.



Press. The SMS is sent.

Each send operation must be confirmed.

## Call to group

You can call up to five members of a group or link them together in a conference.



Two short presses **or** one long press on Phonebook (in standby mode).



Select a group.

**Select**

Press. The group members are listed.



Select the entries you want to call.

**Change**

Press. Highlight entry/unmark entry.

<input type="checkbox"/>	Anne
<input checked="" type="checkbox"/>	Barbara
<input checked="" type="checkbox"/>	Carol
<div>Change</div> <div>OK</div>	

**OK**

Confirm selection.




The first entry is selected. If the connection was established the call is held.



Proceed with calling the next entry until all highlighted entries are called (up to 5, depending on the service provider).


**Options**

Open the menu, e.g. to link the calls on hold in a conference

			(2)
Barbara			
Next: Carol			
Dial?		Options	

## Call to group-Menu

**Options** Open menu.

<b>Dial</b>	Dial current entry.
<b>Skip</b>	Skip next number.
<b>Conference</b>	Link all calls on hold in a conference (p. 15).
<b>Swap</b>	Accept the waiting call and place the current call on hold.
<b>Microphone on</b>	<p>Switch the microphone on or off. If it is switched off, the person on the other end of the line cannot hear you (muting).</p> <p>Alternatively:</p> <p> Hold <b>down</b>.</p> <p>However, numbers being entered are audible when <b>Send DTMF tones</b> is active.</p>
<b>Volume</b>	Adjust handset volume.
<b>Time/charge</b>	While the connection continues the call duration and (if set, see p. 47) the call time/charges are displayed.
<b>Send DTMF tones</b>	(p. 16)
<b>Call transfer</b>	(p. 15)
<b>Main menu</b>	Direct access to the main menu.
<b>Call status</b>	List all held and active calls (e.g. participants in a conference).

## Location:



Open Phonebook.



Select entry.

### Options

Open the menu and select **Edit**.



Go to the input field **Location:**.

An entry can be moved from the Phonebook to the other storage locations.

## SIM (standard)

Entries that are stored in the Phonebook on the SIM card can also be used on another GSM Phone.

## Protected SIM



Phone numbers can be stored in a protected area on a special SIM card. A PIN 2 is needed for editing (p. 11).

## Mobile (phone memory)

Phonebook entries are stored here, if

- pictures are assigned to them,
- the memory of the SIM card is full.

## Record no.:

(Storage location number)

A record number is automatically assigned to every new entry in the Phonebook.

## Making a call



Enter phone number.



Press.



Press.

## Edit



Open Phonebook.



Select entry.

**Options**

Open the menu and select **Edit**.



Go to the input field  
**Record no.:**

**Change**

Keep pressing until the number you want appears. Only **free** storage slot numbers are presented for selection.

**Save**

Press.

## Store control code

You can store phone numbers **and** control codes (DTMF tones) in the Phonebook like a normal entry e.g. to operate an answering machine remotely.




Dial number.



Hold down until a "+" appears on the display (pause for connection setup).



Enter DTMF tones (digits).

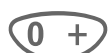

If necessary, enter further pauses of three seconds each to ensure correct processing at the destination.



Enter a name.

**Save**

Press.

You can also store the DTMF tones (digits) without a phone number and send them during a call (p. 16).

## Picture

Assign a picture/symbol to phone numbers. This picture/symbol will appear in the display when there is a call from this number.



Open Phonebook.



Select entry.

**Options**

Open menu and select **Picture**.

## Calling symbol

You can assign one of many standard symbols to a phone number. Three symbols are displayed at one time. The centre symbol is the current selection.



Scroll in the symbol list.

**OK**

The selected symbol is added to the Phonebook entry.

## Calling faces

You can assign a "portrait" to entries. You can assemble the portrait yourself from various pictorial elements.



Scroll up and down to mark the part of the face (top, centre, bottom).



Use the left soft key to scroll between the three views available.

**OK**

The "portrait" is appended to the Phonebook entry.

## Delete picture



Open Phonebook.



Select entry.

**Options**

Open menu and select **Picture**.



Select **Delete picture**.  
Confirm security prompt.


You may transmit and receive very long text messages (up to 760 characters) on your phone, which are automatically composed from several "normal" SMS messages (note the accruing charges).

Depending on the service provider, e-mails and faxes can also be sent or e-mails received via SMS (change setting if necessary, p. 34).


## Read Messages



Display indicates a new message.

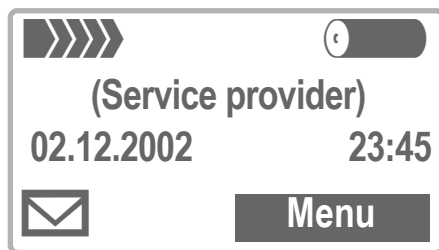

Press the soft key below the letter symbol to read the message.

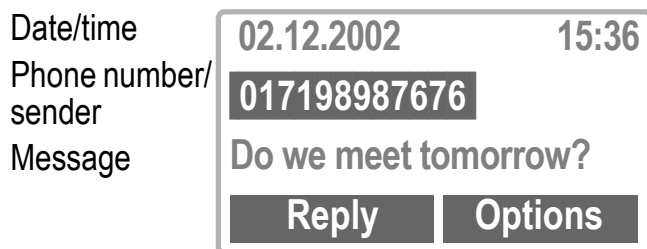

Scroll through the message line by line.

**Reply**

Reply menu, see below.

**Options**

Inbox/outbox menu (p. 28).

## Reply Menu

**Reply** Open reply menu.

<b>Write message</b>	Create a new reply text (p. 29).
<b>Edit</b>	Edit message received or assign a new text to it.
<b>Answer is YES</b>	Add YES to the message.
<b>Answer is NO</b>	Add NO to the message.
<b>- Call back</b> <b>- Delay</b> <b>- Thanks</b>	Append a standard text to the message as a reply.

When the message has been edited in the editor, it can be stored or sent with **Options**.

The memory is full when the message symbol flashes. **No more** SMS messages can be received or written. Delete or save messages (p. 28).


Numbers **highlighted** in the message can be dialled (Call key), stored in the Phone-book (p. 18) or used as the address for a reply.

**Pictures** or **sounds** can be part of messages you received. Pictures are shown in the message, sounds are indicated as notes. If a note is reached when scrolling through the message the corresponding sound is played.

## Inbox/Outbox

**Menu** → **Messages** →  
Inbox // Outbox /

The list of saved messages is displayed.

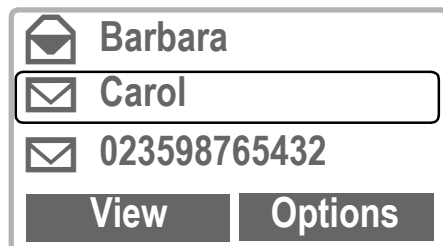

**Options** See right.

Symbol	Inbox /	Outbox /
	Read	Not sent
	Unread	Sent

## Inbox/Outbox-Menu

Different functions are available depending on the context:

**Options** Open menu.

<b>View</b>	Read entry.
<b>Reply</b>	Directly answer incoming SMS messages.
<b>Send</b>	Dial number or select from the Phonebook, then send.
<b>Edit</b>	Open editor for changes.
<b>Delete</b>	Delete selected message.
<b>Delete all</b>	Delete all entries after confirmation.
<b>Picture &amp; Sound</b>	List the pictures and sounds contained in the message.
<b>Capacity</b>	Display maximum and available capacity.
<b>Mark as unread</b>	Mark the message as unread.
<b>Status report</b> 	(Outbox list only) Request delivery confirmation for messages sent.
<b>Save no. to</b> 	Copy a selected phone number to the Phonebook.

## Compose a message

**Menu** → Messages → New SMS



**Text input using "T9"** (p. 31) allows you to quickly create long SMS messages using just a few key entries. **Clear** Press briefly to delete letter by letter, hold down to delete the entire word.



Press.



Dial number or pick out from the Phonebook.

**OK**

Confirm. The message is sent to the service centre for transmission.

**OK**

Return to the editor.

**Options**

Open menu and select **Save** to store the message.


If **Message type**, **Validity period** or **Service centre**: are requested, see p. 34

## Text Menu

**Options**

Open the text menu.

<b>Send</b>	Dial the number of the address or select from the Phonebook, then send.
<b>Save</b>	Save the composed message in the outbox list.
<b>Picture &amp; Sound</b>	Add pictures and sounds to message (p. 30).

<b>Format</b>	<b>Line feed</b> Small font, Medium font, Large font <b>Underline</b> Left, Right, Center <b>Mark text</b>
<b>T9 input</b> (p. 31)	<b>T9 preferred</b> Activate/deactivate T9 input. <b>Input language</b> Select the language in which the message is to be composed.
<b>Line feed</b>	Enter a line break.
<b>Clear text</b>	Delete the whole text.
<b>Insert text</b>	Insert standard text in the message.
<b>Insert from</b> 	Open Phonebook and copy the phone number into the text.
<b>Bookmarks</b>	Insert URL from the WAP bookmark in the text.

## Information on SMS

If the phone was unable to send the message to the service centre a retry option is available. If this attempt also fails, contact your service provider. The **Message sent!** text only indicates that the message has been transmitted to the service centre which now tries to deliver the message within a certain period.

## Predefined text

Standard text fragments which can be added to messages are stored in the phone. You can also create five additional text fragments yourself.

### Write text fragments

**Menu** → Messages  
→ Predefined text

<New entry> Select.



Write text fragment.

**Save**

Press.

### Use text fragment



Compose message  
(p. 29).

**Options**

Open the text menu.

**Insert text**

Select.



Select text fragment  
from the list.

**Select**

Confirm. The text fragment is inserted in the message at the cursor position.

## SMS to group

You can send messages (SMS) as "circulars" to all members of a group (p. 22).

## Picture & Sound (EMS)

Pictures and sounds can be inserted in the message. Playback only occurs on phones that support this function. In input mode a wildcard is shown instead of the picture/sound.



Compose the message  
as usual.

**Options**

Open the text menu at  
the end of a word.

### Picture & Sound

The Pictures&Sound  
menu opens:

Fix animations 

Fix sounds 

Own animat. 

Own sounds 



Select range.

**Select**

Confirm.

The first entry of the selected range is displayed.



Scroll in the list to the  
required entry.

**Download**


The picture, sound or animation is "inserted" in the text and shown there as a wildcard.

## Text entry with "T9"

"T9" deduces the correct word from the individual key entries by making comparisons with an extensive dictionary.

### Activate, deactivate T9

**Options** First select **T9 input**, then select **T9 preferred**.

 Activate T9 and confirm with **Select**.

### Select Input language

Select the language in which you want to compose the message.

**Options** Open text menu, select **T9 input**, then select **Input language**.


**Select** Confirm. The new language is set.


### Create a word using T9

Since the display changes as you proceed **it is best if you finish a word without looking at the display**.

You simply press the keys where the relevant letter is located **once** only. For "hotel" for example type:

 Press. A blank ends a word.

 Press repeatedly before the word for lowercase letters/uppercase letters, digits or special characters.

Do not use special characters such as **Ä** but write the standard character, e.g. **A**. T9 will do the rest for you see p. 33.



**Press briefly:** Switch between uppercase, lowercase letters and digits.

**Hold down:** Set input language and text mode.



Blank. Ends a word.



Full stop. Ends a word when a blank follows. Acts as a wildcard character for an apostrophe/hyphen in the word:  
e.g. **provider.s** = provider's.




Go to the right. Ends a word.



Deactivate T9 temporarily and activate it again.

### Special characters

Press key repeatedly until the character is displayed. To write special characters after numbers (e.g. 5 £), switch to the letter mode first: 

	Blank	1	€	£	\$	¥	¤		
<div> <div>.</div> <div>i</div> </div>	,	“	”	;	—				¿
	*	/	(	)	<	=	>	%	~
	#	@	\	&	§	Γ	Δ	Θ	Λ
	≡	Π	Σ	Φ	Ψ	Ω			

Display in the uppermost line:

**T9 Abc SMS 1 739**

**We start at 8 a.m.**


**T9** T9 active.  
**abc/Abc/123** Lowercase/uppercase letters or digits.  
**SMS 1** Number of the required SMS messages.  
**739** Number of characters still available.


T9® Text Input is licensed under one or more of the following: U.S. Pat. Nos. 5,818,437, 5,953,541, 5,187,480, 5,945,928, and 6,011,554; Canadian Pat. No. 1,331,057; United Kingdom Pat. No. 2238414B; Hong Kong Standard Pat. No. HK0940329; Republic of Singapore Pat. No. 51383; Euro.Pat. No. 0 842 463 (96927260.8) DE/DK, FI, FR, IT, NL, PT, ES, SE, GB; and additional patents are pending worldwide.

## T9 word suggestions


If several options are found in the dictionary for a key sequence (a word), the most probable is displayed first. If the word you mean has not been recognised, the next suggestion from T9 may be correct.

The word must be **highlighted**. Then

 press. The displayed word is replaced with a different word. If this word is also incorrect,

 press again. Repeat until the correct word is displayed.

If the word you want is not in the dictionary, it may be written without T9 or added to the dictionary.

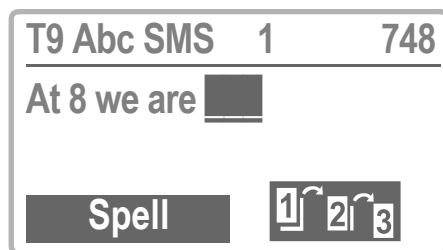

**Spell** Select.

The last suggestion is deleted and the word may now be entered without T9 support. Press **Save** to add it automatically to the dictionary.

Load other input languages:  
[www.my-siemens.com/t9](http://www.my-siemens.com/t9)

## Correct a word

Words created **using** T9:



Move word by word to the left/right until the required word is highlighted.



Scroll through the T9 word suggestions again.



Deletes the letter on the left of the cursor **and** displays the new possible word!

Within a " T9 word " individual letters may not be edited without cancelling T9 first. In most cases it is better to rewrite the complete word.

Words **not** created using T9:



Move character by character to the left/right.



Deletes the letter on the left of the cursor.



Symbols are inserted at the cursor position.

## Setup

An SMS profile (maximum 5) defines the transmission characteristics of an SMS.

The presetting depends on the SIM card inserted.

**Menu** → **Messages** → **Setup**

You can select a profile from the list of available profiles. To activate it:

**Activate** Press.

## Setup menu

**Options** Open menu.

<b>Activate</b>	Use the profile selected.
<b>Change settings</b>	Change profile, see options below.
<b>Rename</b>	Rename the profile.

## Service centre

Enter or change the phone numbers of the service centre as supplied by the service provider.

## Recipient

Enter the standard recipient for this transmission profile or select from the Phonebook.

## Message type

<b>Manual</b>	The message type is requested for each message.
<b>Standard text</b>	Normal SMS message.
<b>Fax</b>	Transmission via SMS.
<b>E-mail</b>	Transmission via SMS.
<b>New</b>	You may need to obtain the required code number from your service provider.

## Validity period

Select the period in which the service centre tries to deliver the message:

**Manual, 1 hour, 12 hours, 1 week, Maximum \*, New**

\* Maximum period that the service provider permits.

## Status report



You are given confirmation of the successful or unsuccessful delivery of a sent message. This service may be subject to a charge.

## Direct reply



The reply to your message is handled via your service centre when this function is activated (for information please contact your service provider).

## Internet (WAP)


Get the latest WAP information from the Internet that is specifically adapted to the display options of your phone. Internet access may require registration with the service provider.

### Internet access



**Menu** → Surf & fun → Internet

You can set the Internet access profile (see **Start with...** p. 36).  
The start menu appears, e.g.:

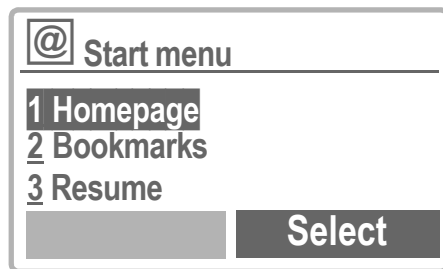

Select the required function


**Select**

Confirm.


You can now surf the Internet ...



Hold **down** to end the connection.

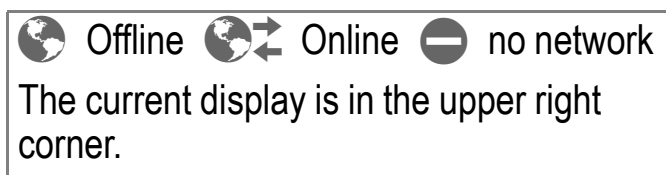


## Start menu

<b>Homepage</b>	The connection to the Internet provider's portal is established (may be set/preset by the provider).
<b>Bookmarks</b> 	Display up to 10 URLs stored in the phone for fast access (not supported by all providers). For how to use see p. 39.
<b>Resume</b>	Call up recently visited pages that are still in the memory.
<b>Profiles</b>	Set up to 5 access profiles (p. 37). Select <b>New entry</b> to enter a new profile.
<b>Exit browser</b>	Close the browser and clear down the connection.

## Example: Homepage

The soft keys may be assigned functions that are controlled online from the home page of your service provider such as "links" or "menus".

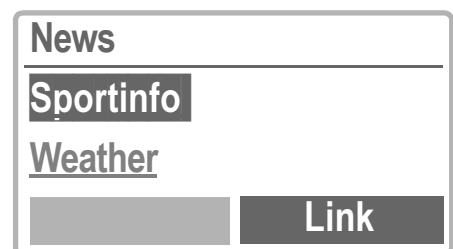

The contents of options menus are also variable.

## Browser menu

Menu access is only possible when a WAP page is displayed (online or offline):




**Press to start the browser menu.**

or



Select and confirm  
**Start menu.**

<b>Homepage</b>	The first WAP Internet page that is displayed after connection is established (may be set/preset by the service provider).
<b>Bookmarks</b> 	Display up to 10 URLs stored in the phone for fast access (not supported by all Service Providers). For how to use see p. 39.
<b>Resume</b>	Call up recently visited pages that are still in memory.
<b>Go to URL</b>	Enter URL for directly accessing an Internet address (e.g. <b>wap.my-siemens.com</b> ).
<b>Show URL</b>	Show the Internet address of the current page.
<b>Reload</b>	The page is reloaded.
<b>Disconnect</b>	Close the browser and clear down the connection.
<b>More ...</b>	See below.
<b>Exit browser</b>	Close the browser and clear down the connection.

## More ...

<b>WAP Profiles</b>	Set up to 5 access profiles (p. 37).
<b>Reset</b>	Delete the pages last visited (cache).
<b>Setup</b>	<b>Font size</b> <b>Protocol parameters</b> <ul style="list-style-type: none"> <li>• Push</li> <li>• Push can force online</li> <li>• Timeout for unanswered network requests</li> </ul> <b>Security</b> <ul style="list-style-type: none"> <li>• Connection prompt</li> <li>• Secure prompt</li> <li>• Current certificate</li> <li>• CA certificates</li> <li>• Private Key PINs</li> <li>• Encryption</li> </ul> <b>Start with...</b> <ul style="list-style-type: none"> <li>• Start menu</li> <li>• Browser menu</li> <li>• Homepage</li> <li>• Resume</li> <li>• Bookmarks</li> </ul>
<b>Inbox</b>	Inbox for incoming messages.
<b>Save bitmap</b>	Bitmap viewer opens for editing the picture.
<b>About Open-wave</b>	Display the browser version.

## Setup

Preparation of the phone for Internet access depends on the service provider currently used:

- If the settings have already been made by your service provider you may begin immediately.
- If access profiles have already been assigned by your service provider select a profile and activate it (p. 38).
- The access profile must be set and activated manually.

If necessary, check with your service provider for details.

## Profiles

You can set or change up to 5 access profiles (may be barred by your service provider). The entries and functions may vary depending on your service provider. You can change a profile each time before accessing the Internet (p. 38).

### Profile settings

To create a new profile proceed as follows:

**Menu** → Surf & fun → Internet  
→ Profiles



Select a profile.


**Change**

The entry card is displayed.



Make your entries field by field.

You may get further information on the entries from your service provider.


<b>Profile name</b>	Name the profile or change it.
<b>WAP Parameters</b> 	<b>IP address: *</b> Enter IP address.  <b>Port: *</b> Enter port number.  <b>Homepage:</b> Enter homepage (p. 35) if not set by the service provider.  <b>Linger time:</b> Enter time in seconds after which a connection should be terminated if no input or data transfer takes place.
<b>CSD settings</b>	<b>Dial-up no.:</b> Enter ISP number.  <b>Call type:</b> Select ISDN or Analogue.  <b>Login name:</b> Enter login name.  <b>Password:</b> Enter password (shown as a series of asterisks).

**Save**

The settings are stored and the profile list is shown.

\* depending on service provider, enter 2nd IP address and 2nd port if nec.

## Activate profile

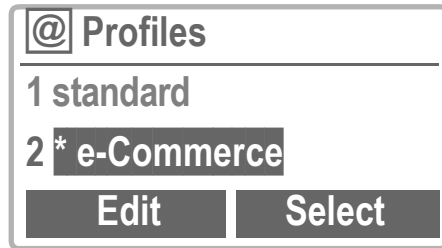

Activate a profile to establish the Internet connection:

**Menu** → **Surf & fun** → **Internet**  
→ **Profiles**



Select the required profile.

**Select**

Press to activate. The connection is established.

Your Internet browser is licensed by:



### Special characters (as with the SMS text editor)



Press 3 times for /



Press 3 times for @



Press for . (full stop)



Press repeatedly for :



Press repeatedly for ~

## Operating instructions

### Start with...

You can set what is to be displayed after Internet access:



Open the browser menu.

**More ...**

Select.

**Start with...**

Select, then select from the list:

**Start menu** (p. 35)

**Browser menu** (p. 36)

**Homepage**

**Resume** (p. 36)

**Bookmarks**

### Edit

The address of the home page is set in the (access) profile. You can change it in standby mode (if permitted by the service provider!):

**Menu** → **Surf & fun** → **Internet**  
→ **Profiles**

Select the profile, e.g.:

**e-Commerce** Select.

**Edit**

The entry card is displayed.

### WAP Parameters/Homepage

Select.



Enter new address.  
Go to the end of the entry card.

**Save**

Press.

## Enter the Internet address (URL)

Menu access is possible as soon as WAP pages are displayed (online or offline).



Open the browser menu.

### Go to URL



Select.

Enter URL and confirm. The connection is established.

## Bookmarks



You can store a list of your favourite Internet addresses (URLs) in the phone depending on the service provider:

### Save



Open.

### Bookmarks

Select.

### Online:

#### Add bookmark

The current WAP address is added as a bookmark.

### Offline:



Select the desired profile or **(Empty)**.

### Menu

Open menu.

### Edit

Open entry for editing, enter or change name and URL, and confirm. Press **Save**.

### Delete

Delete the selected entry.

### Delete all

Delete all entries (no confirmation requested!).

### Go

The selected call is set up.

## To use a favourite

Proceed as with "Save" then select the stored bookmark in the list and confirm. The connection is established.

## Download

The WAP Browser allows you to download content such as ringtones and bitmaps to your A50. For download simply select the desired content and confirm your entry with ✓. Depending on the content selected, the corresponding management program is started automatically in your phone after confirmation (e.g. **Bitmap viewer** for Pictures).

You will find ring tones, operator bitmaps, screen savers and other services for your Siemens mobile telephone at:  
**[www.my-siemens.com/city](http://www.my-siemens.com/city)**

This city portal (p. 70) also includes a list of countries in which this service is available.

You will find a large selection of contents that can be downloaded to your telephone via WAP, such as ring tones or bitmaps for your A50, at **[wap.my-siemens.com](http://wap.my-siemens.com)**

## Games

**Menu** → Surf & fun → Games  
→ Select game

Select a game from the list and have fun!


### Game instructions

You will find special instructions for each game in the option menu.

**Options** Provides tips on how to play the game, shows the saved scores and allows you to set the level of difficulty.

**Start** Start game.

### Key control

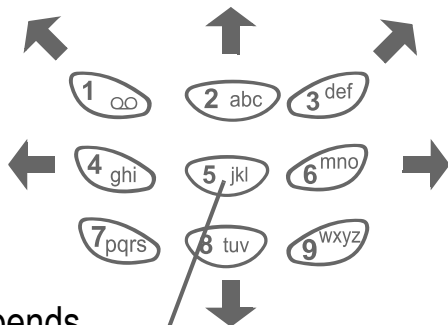

function depends  
on the game

or

use the keys



and



**Menu** → Surf & fun → Games  
→ Setup

### Setup

You can activate and deactivate the following functions for the games:

#### Sounds

You can switch the sounds for the games on and off.

#### Illumination

You can switch off the display illumination to increase standby time.

#### Silent alert

You can switch the silent alert for the games on and off.

You will find the games "Stack Attack" and "Balloon Shooter" on your mobile phone.

English language instructions for "Stack Attack" and "Balloon Shooter" can be found at

[www.my-siemens.com/a50](http://www.my-siemens.com/a50)

## Bitmap viewer

Set logos and screensavers on your phone according to your wishes.

### Show Screensaver or Logo



Select **Screensaver** or **Logo**.



Graphic is shown.

### Receive graphic.

A graphic can be transmitted to the Bitmap viewer via SMS from a provider or downloaded via WAP.

A received graphic is indicated by a symbol above the left soft key. By pressing this key, the Bitmap viewer is started and the graphic is displayed.

### Store graphic.

Store current graphic in the Bitmap viewer:



Press.



Select **Screensaver** or **Logo**.



Press.

### Bitmap viewer-Menu

**Options** Open menu.

<b>Save</b>	Store the current graphic on one of the storage locations.
<b>Send</b>	Send graphic via SMS. *
<b>Load</b>	Load graphic to the Bitmap viewer.
<b>Discard</b>	The current graphic is discarded.
<b>Delete</b>	Delete a graphic from <b>Screensaver</b> or <b>Logo</b> .

\* Your A50 provides you with the option of sending a graphic or a screensaver via SMS.

You can find operator graphics at:

**[www.my-siemens.com/logos](http://www.my-siemens.com/logos)**

See also City portal (p. 70).

## Melodies

You can use this function to manage your ring tones.

### Load and play ring tones

**Menu** → **Audio** → **Melodies**  
→ **Melody manager**



Select memory location  
**Individual 1 to 4.**

**Load**

Load melody to the buffer.

**Play**

Play melody.

### Melodies-Menu

**Options**

Open menu.

<b>Play</b>	Play the ring tones currently loaded.
<b>Save</b>	Store ring tone under <b>Individual 1 to 4.</b>
<b>Send</b>	Send ring tone via SMS (only <b>Individual 1 to 4.</b> )
<b>Load...</b>	Load ring tone from <b>Individual 1 to 4.</b>
<b>Discard</b>	Delete ring tone from the buffer.
<b>Delete</b>	Delete ring tone from <b>Individual 1 to 4.</b>

## Receive and save ring tones

A melody is transferred to the buffer via SMS/WAP. When a melody has been received an icon appears above the left soft key.

Press soft key:

**Options**

Open menu.



Scroll to **Save.**

**Select**

Press.



Select memory location  
**Individual 1 to 4.**

**Save**

Store melody.

Ring tones are available at:  
**[www.my-siemens.com/ringtones](http://www.my-siemens.com/ringtones)**

Most service providers offer you an external answering service. In this mailbox, a caller may leave a voice message for you

- if your phone is switched off or not ready to receive,
- if you do not want to answer,
- if you are making a phone call (and if **Call waiting is** not active, p. 14).

If the voice mail service is not part of your service provider's user package, you will need to register and the settings must be made manually. The following description may vary slightly depending on the service provider.

## Setup



Your service provider supplies you with two numbers:

### Mailbox number

You can call this phone number to listen to the voice mails left for you. To set it up:

**Menu** → **Messages**  
→ **Voice message**

Select phone number from the Phonebook or dial/change it and confirm with **OK**.

### Forwarding number

Calls are diverted to this phone number. To set it up:

**Menu** → **Divert**  
→ e.g. **Unanswered**  
→ **Set**

Dial the number of the mailbox.

**OK** Registration at the network will be confirmed after some seconds.

For further information on call divert, see (p. 48).


## Listen to



A new voice mail can be displayed as follows:

 Icon plus beep

or

 a text message announces a new voice mail

or

you receive a call with an automatic announcement.

Call your mailbox and play the message(s) back.



Hold **down** (if necessary dial the mailbox number once only).

Confirm with **OK** or **Mailbox** depending on the service provider.

Outside your home network you may need a different mailbox number and enter a password to access your mailbox.

Some service providers offer information services (info channels) such as area codes, stock markets etc. The information available depends on the service provider. If reception is activated, you receive messages on the active topics in your "Topic list".

**Menu** → **Messages**  
→ **Cell broadcast**

## Receive CB



You can activate and deactivate the CB service. If the CB service is activated, the operating time of the phone will be reduced.

## Read new CB

All unread CB messages are displayed.



Scroll through the message line by line.

## Topic list

You can add an unrestricted number of topics to this personal list from the topic index (see "Topic retrieval", p. 45). You can preset 10 entries with their channel number (ID) and, if necessary, name. Five topics can be active at one time.

## New topic

**New topic** Select.

- If no topic index is available (see "Topic retrieval", p. 45), enter a topic with its channel number and confirm with **OK**.
- If the topic index has already been transmitted, select a topic and confirm with **OK**.

## Selection from a list

**Options** Open the list menu.

If a topic is selected in the list, you can have a look at it, activate/deactivate it, edit it and delete it.

## Auto display

CB messages are displayed in standby mode, longer messages are automatically scrolled.

The automatic display can be set for all messages or only new messages or deactivated entirely.

To switch to "full page view" automatically:

 then press **Read CB**.

## Topic index



The list of the topics currently provided by your service provider is displayed for you to choose from.

If none are displayed you must enter the channel numbers (ID) manually (see "Topic list", p. 44). Please contact your service provider for details.

## CB languages

You can define whether you want to receive Cell Broadcast messages only in a specific language or in all languages.

### Displays



Topic activated.



Topic deactivated.



New messages received on the topic.



Messages on the topic already read.

Highlighted phone numbers can be:



dialled

or

**Options**

stored in the Phonebook.

Additional beep, see (p. 55),.

## SIM services (optional)



Your service provider may offer special applications such as Mobile Banking, stock market, etc. via the SIM card.

If you have such a SIM card the SIM services will appear at the top of the main menu or directly above the left soft key.



Icon of SIM services.

If there is more than one application they are displayed in the "SIM services" menu.

**Menu**





**SIM serv**

With the SIM services menu, your phone is ready for the future and will support additions to your service provider's user package. For further information, please contact your service provider.

Your phone stores the phone numbers of calls for convenient redialling.

**Menu** → **Records**

 Select the required call list and select the number there.

 Dial number  
**or**

**View** view information on the phone number:  
date, time.

The following call lists are available:

## Missed calls

The phone numbers of calls that you have not answered are recorded for call back purposes.

Requirement:  
The network used supports the "Caller Identity" feature.


## Calls received

All accepted calls are listed.

Requirement:  
The network used supports the "Caller Identity" feature.

## Calls dialled

Access to the last ten phone numbers you dialled.

 Fast access in standby mode.

## Erase records


The contents of all call lists are deleted.


## Records-Menu

The call list menu can be called up if an entry is highlighted.

**Options** Open list menu.

You can edit an entry, delete it or transfer a phone number to the Phonebook.

View	View entry.
Correct no.	Load number into display and correct it there if necessary.
Save no. to 	Save entry in phonebook.
Delete	Delete entry after confirmation.
Delete all	Delete all entries from call list after confirmation.

 Easy access to the call lists from the standby mode.

You can display the charge details and the duration of calls as you speak, as well as setting a unit limit for outgoing calls.

## Display

**Menu** → **Records**  
→ **Duration/charges**

After you have made the charge detail settings, you can display the call duration/charge details for the following call types or you can display the credit balance.

### Last call

### All outgoing calls

### All incom. calls

### Remain. units

Select a call type.

**Select** Display the data.

When displayed, you can:

**Reset** Clear display.

**OK** End display.

## Charge settings

**Menu** → **Records** → **Charge settings**

### Currency

(PIN 2 query)

Enter the currency in which the charge details are to be shown.

### Personal rate



(PIN 2 query)

Enter the charges per unit/period.

### A/c limit



(PIN 2 query)

Special SIM cards allow you or the service provider to define a credit/period after which the phone is blocked for outgoing calls.

**Change** Enter the number of units and confirm with **OK**.

Then confirm the credit or reset the counter. The display of Prepaid cards may vary depending on the service provider.

### All calls



Switch between the displays.

### Incoming calls



If your network supports charge detail display, the current units are displayed.

If you have set charge details per unit, the costs incurred are displayed.

Special registration may be necessary for this service.

### Auto display

Call duration/charges are automatically displayed after each call.

You can set the conditions for which calls are diverted to your mailbox or other numbers.

**Menu** → **Divert**

### Set divert:

The most common condition for forwarding is:


### Unanswered

**Menu** → **Divert**


 Select **Unanswered**.

**Select** Press.

**Set** Select.

 Enter the phone number to which a call will be diverted (if not done already)

**or**

 select the phone number from the Phonebook or from the **Mailbox**.  
Confirm with:

**OK** After a short pause, the setting is confirmed by the network.

### Unanswered

This setting covers the most important conditions (see also below):

**Not reachable, No reply, Busy**

### All calls

All calls are diverted.



Symbol in the top line on the display in standby mode.

### Spec. divert

#### Not reachable

Divert if the phone is switched off or out of range.

#### No reply

A call is only diverted after a short delay (depends on the network). The period can be set by the user to a maximum of 30 seconds in 5 second intervals.

#### Busy

Divert if a call is in progress.

Exception: If **Call waiting** is activated (p. 61), you will hear the call waiting tone (p. 14) during a call.

## Status check

You can check the current divert status for all conditions.

After a short pause, the current information is transmitted by the network and displayed.



Condition set.



Not set.



Display if status is unknown (on a new SIM card for example).

## Clear all

All set diversions are cleared.

To check or delete a certain condition:

First select the condition.

**Select**

Press.

**Check status**

**or**

**Delete**

Select.

Note that the divert is stored in the network and not in the phone (when the SIM card is changed for example).

## Reactivate divert

The last divert has been stored.

Proceed as with Set divert:

The stored number is displayed.

Confirm the number.

## Edit phone number

Proceed as with "Set Divert". When the stored number is displayed:

**Delete**

Delete the phone number.

Enter new number and confirm.

**Menu** → **Clock**  
→ select a function:

## Alarm clock

Use this function to set **a single** time for the alarm call. The alarm sounds even when the phone is switched off.

**On/off** Switch the alarm on and off.

### Setting

**Change** Display the set time and date for the alarm call.


Set the time for the alarm call (hh:mm).



Navigate to the days.

**Change** Set the days for the alarm call.

**OK** Confirm settings.

 Alarm clock active (display in standby mode).

## Time/date

The clock must be set correctly once at start-up.

**Change** Press.



First date (day/month/year), then time (24 hours including seconds).

## Format date

Setting of the date format:  
**DD.MM.YYYY** or **MM/DD/YYYY**

## Auto display

The time display can be switched on and off.

## Auto phone off

The phone switches off each day at the set time.

### Activate:

**Clock** Press.



Enter the time (24 h clock).

**OK** Confirm.

### Deactivate:

**Manual** Press.

**OK** Confirm.

If the battery is removed for more than about 30 seconds, the clock must be reset.

If a profile is used, several settings are made with **one** function.

- Three profiles are standard with default settings, they can be changed however:  
**Normal envi.**, **Quiet environ.**, **Noisy environ.**
- You may set two personal profiles individually (<**No Title**>).
- The special profile **Aircraft mode** is fixed and cannot be changed (p. 52).

If the phone is used by several people, they can each activate their own settings by selecting their personal profile.

## Activate

**Menu** → Profiles



Select default profile or a personal profile.

**Activate** Activate the profile.

☐ Normal envi.  
☒ Quiet environ.  
☐ Noisy environ.  

Activate

Options

- Highlights the active profile.

## Setup

Edit a default profile or create a new personal profile:



Select profile.

**Options**

Open menu.

### Change settings

Select.

The list of available functions is displayed:

<b>Ringer setting</b>	p. 55
<b>Volume</b>	p. 55
<b>Melodies</b>	p. 55
<b>Call screening</b>	p. 55
<b>Silent alert</b>	p. 55
<b>Key tones</b>	p. 56
<b>Info tones</b>	p. 56
<b>Illumination</b>	p. 57
<b>Big letters</b>	p. 57
<b>Bitmap style</b>	p. 57

When you have finished setting a function you return to the profile menu where you can change a further setting.

## Profiles-Menu

**Options**

Open menu.

<b>Activate</b>	Activate profile.
<b>Change settings</b>	Change profile settings.
<b>Copy from</b>	Copy settings from another profile.
<b>Rename</b>	Rename personal profile.

**Menu** → Profiles

## Aircraft mode

The alarm clock is deactivated. The phone will be switched off when you select this profile. It is **not possible** to modify this profile.

### Activate

**Menu** → Profiles



Scroll to **Aircraft mode**.

**Activate**

Activate the profile.

A security prompt must be confirmed.




The phone switches itself off automatically.

## Normal operation

The next time you switch on the phone and return to normal operation the default profile **Normal envi.** will be activated.

The left soft key and the keys 2 to 9 (speed dialling numbers) can each be assigned an important phone number or a function. The phone number can then be dialled or the function can be started at the touch of a button.

A function may already have been programmed on the left soft key by your service provider (e.g. access to "SIM services"). It may not be possible to modify this key assignment.

The soft key may sometimes be replaced with /○○ to access a new message.


Key assignments available:

- Internet ..... p. 35
- Phone number ..... p. 18
- Alarm clock ..... p. 50
- New SMS ..... p. 29
- Illumination ..... p. 57
- Hide ID ..... p. 61
- Games ..... p. 40
- Missed calls ..... p. 46
- Calls received ..... p. 46
- Inbox (SMS) ..... p. 28
- Outbox (SMS) ..... p. 28
- Call screening ..... p. 55

## Left soft key

The **left** soft key can be used for fast access.

### Change

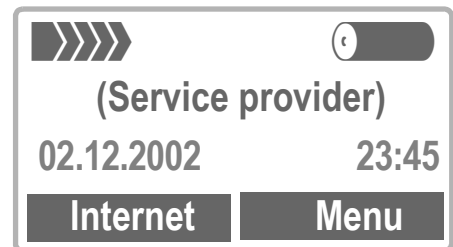

**Internet**

Press **briefly**.

**Change**

Scroll to the application in the list.

- Assign the new application (e.g. **New SMS**) to the soft key.
- Special case **Phone number**. Pick out a name from the Phonebook (e.g. "Carol") to assign to the soft key.

**Select**

Confirm setting.

### Apply

The setting "Carol" is used here only as an example.

**Carol**

Hold **down**.

## Speed dialling keys

Digit keys 2 to 9 can be used as speed dialling numbers for fast access. For available key assignments, see p. 53.

The following key is reserved:

= mailbox number (p. 43)

## Change

In standby mode:



Press digit key (2-9).

If the key is not assigned:

**Set**

Press.

or

**New SMS**

Press **briefly** (if, for example, **New SMS** is assigned).

**Change**

Scroll to application in the list.

Special case **phone number**. Select a name from the Phonebook for assignment to the key.

Special case **Internet**. Scroll to an URL in the bookmark list for assignment to the key.

**Select**

Confirm setting.

## Apply

Select a stored phone number or start a stored application (e.g. Games).

In standby mode:



Press.

The assignment of digit key 2 is displayed instead of the left soft key, e.g.:

**New SMS**

Hold **down**

or simply



hold **down**.

You can set the tones that sound in specific situations to suit your particular tastes.

**Menu** → **Audio**  
→ select a function:

## Ringer setting

Activate/deactivate the ringer or reduce it to a short beep.



Beep is active.



Ringer is deactivated.

In standby mode: activate, deactivate also with:



Hold down.

## Volume

You can set the volume for each area.



Select the range:

**Any call**

**Alarm clock**

**Messages**

 
**Cell broadcast**



Set volume.



Confirm.



Displays rising volume.

If two separate phone numbers are registered for your phone you can set different volumes for them (p. 59).

## Ring tones

For the ranges/functions listed below you can choose from 20 ring tones already stored in the phone and from four own ring tones (**Individual 1 to 4**).



Select range:

**Calls**

**Group calls**

**Other calls**

**Alarm clock**

**Messages**

**Cell broadcast**



Choose ring tone.



Confirm.

Compose/load individual ring tones with SMS (p. 42).

## Call screening



Only calls from numbers that are in the Phonebook or in a predefined group are signalled audibly or by the trembler. Other calls are merely displayed.

If you do not accept these calls, they are diverted to your mailbox (if set, p. 48).



Displayed when activated.

## Silent alert

To avoid being disturbed by the ringer, you can activate the trembler instead. It can also be activated in addition to the ringer (e.g. in noisy environments). The trembler is deactivated when the battery is being charged.

## Key tones

Set the acoustic key tone:  
**Click** or **Tone** or **Silent**

## Minute beep

During the call you hear a beep after every minute as a reminder of the time elapsed.

## Info tones

Set service and alarm tones:

**Select** On or Off.

**Edit** On and Extended.

- Menu** → Setup  
→ Select a function.

## Language

- Menu** → Setup → Language

Set the language of the display texts. When "automatic" is set the language of your service provider is used. If a language that you do not understand happens to be set, the phone can be reset to the language of your service provider with the following input:

**\*#0000#** 


## Display

- Menu** → Setup → Display  
→ Select a function.

### Own greeting

The greeting is displayed when you switch on the phone.

**Edit** Activate and deactivate.

 Delete old message and compose new message.

**OK** Confirm changes.

## Screensaver

The screensaver shows a graphic on the display once a user-definable time has elapsed. An incoming call and any key press ends the function.

Receive and save screensaver as for receive and save logo, see right.

You will find screensavers at:  
**[www.my-siemens.com/screensaver](http://www.my-siemens.com/screensaver)**

You have the following options:

- Activate/deactivate the function.
- Set style: Graphic, analogue clock
- Load graphic via **Bitmap viewer**.
- Test Screensaver.
- Set period after which the screensaver starts.
- Activate password query as a security setting.

## Illumination

The display illumination can be switched on and off (switching it off increases the standby time).

## Big letters

You can choose between two font sizes for the display.

## Contrast

Setting of the display contrast.

## Bitmap style

Select between two animations that are shown in different situations, e.g. when entering a PIN.


**Menu** → Setup  
→ Select a function.

## Status

**Menu** → Setup → Status  
→ Select a function.

## Fact. settings

The phone is reset to the default values i.e. the factory settings (does not apply to SIM card and network settings):

\*#9999# 

## Phone identity

The phone identity number (IMEI) is displayed. This information can be helpful for customer service.

## Fast search

When this function is active, network reconnection is speeded up (standby time is reduced).

## T9 input

**Menu** → Setup → T9 input  
→ Select a function.

## T9 preferred

Activate intelligent text entry or deactivate it.

## Input language

Select language in which the message is to be composed.

## Security

The phone and SIM card are protected against misuse by several security codes and should be treated with the same care as a cheque guarantee card.

**Menu** → Setup → Security  
→ select a function:

**PIN control, Change PIN, Change PIN2, Change phonecode**  
(p. 11)

## Babysitter

(Phonecode protected)

Only **one** number can be dialled. Hold **down** the right soft key on the outside right (p. 17).

## This SIM only

(Phonecode protected)

Your phone is prevented from being operated with **a different** SIM card.

## Network

**Menu** → **Setup** → **Network** →  
select a function:

### Line



This function is only displayed if it is supported by your service provider.

**Two independent** phone numbers must be registered on the phone.

### Select

Select the currently used phone number.

**1** >>> > Display the active phone number.

Special settings can be made for each phone number (e.g. melody, call divert etc). Switch to the required phone number first. To switch the phone number/line (in standby mode):

**0 +** Press.

**Line 1** Press.

### Lock line

#### (Phonecode protected)

You may limit usage to one phone number.

## Configuration

### Network info

The list of GSM networks currently available is shown.



Indicates forbidden service providers (depending on SIM card).

### Choose network

The network search is restarted. This is useful if you are **not** on your home network or want to register on a **different** network. The network info list is rebuilt when **Auto network** is set.

### Auto network

Activate or deactivate, see also "**Choose network**" above.

If "Automatic network" is activated, the next network is dialled in the order of your "preferred service providers". Otherwise a different network can be selected manually from the list of available GSM networks.

### Net operator

A list of all known GSM Networks worldwide is displayed with the current codes.

### Band selection



Select either GSM 900 and GSM 1800.

**Menu** → **Setup** → **Network**  
 → select a function:

### Pref. network

The service providers you prefer after your home service provider are displayed in this list (e.g. if there are several service providers that differ in price).

If the signal strength of your preferred network is not strong enough when you switch the phone on, the phone may log on to another network. This can change when the telephone is next switched on or if you manually select another network (p. 59).

Your service provider is displayed.

**List** Display list of preferred networks.

Create new entry:

- Select empty line, press **Entry**, then select an entry from the list of service providers and confirm it.

Change/delete entry:

- Select an entry, press **Change** then select another entry from the list of service providers and confirm it.

or  
 press **Delete**.

## Barrings



Barring restricts the use of your SIM card (not supported by all service providers). You need a 4 digit password that your service provider supplies you. You may need to be registered separately for each barring.

### All outgoing

All outgoing calls except emergency number 112 and 999 are barred.

### Outgo internat

Only national calls can be made.

### Out.int.x home

International calls are not permitted. However you can make calls to your home country when abroad.

### All incoming

The phone is barred for all incoming calls (the forwarding of all calls to the mailbox offers a similar effect).

### When roaming

You do not receive calls when you are outside your home network. This means that no charges are incurred for incoming calls.

### Status check

The following info can be displayed after a status check:



Barring set.



Barring not set.



Status unknown  
 (e.g. new SIM card).

### Clear all

All barrings are cleared.

## During a call

**Menu** → **Setup** → **During a call**  
→ then select a function:

### Call waiting



If you are registered for this service you can check whether it is set, and you can activate or deactivate it (p. 14).

### Hide ID



When you make a call, your number may be displayed on the recipient's display (depending on the service providers).

To suppress this display, you may activate the "Conceal ID" mode for the next call or for all subsequent calls. You may need to register separately with your service provider for these functions.

## Headset

**Menu** → **Setup**

If an original Siemens Headset (p. 69) is used the profile is activated automatically as soon as the headset is plugged in.

### User-definable settings

#### Auto answer

(factory default: off)

Calls are automatically accepted after a few seconds (except where the ringing tone is switched off or set to beep). You should therefore be wearing the headset.

Unwanted listening-in is possible!

#### Automatic setting

Accept call with the Call key or PTT key (Push To Talk) when the key lock is activated.

#### Automatic answer

If you fail to notice an incoming call there is a risk that it may be overheard by others.

## Car Kit

**Menu** → **Setup** → **Car Kit**

If an original Siemens Car Kit is used the profile is activated automatically as soon as the phone is inserted into the cradle.

The Car Kit must be plugged into the cigarette lighter and not connected directly to the battery.

### User-definable settings

#### Auto answer

(factory default: off)

Calls are accepted automatically after a few seconds.

Unwanted listening-in is possible!



Indication on the display.

#### Switch between the phone and Car Kit Portable



Switch to headset during a call (if the phone is connected to the Car Kit Portable).

#### Auto off






















(factory default: 2 hours)







The phone is powered by the car's power supply. The time between switching off the ignition and deactivation of the phone can be adjusted.

### Automatic settings










- Permanent illumination: Switched on,
- Auto key lock: Switched off,
- Charge the phone battery,
- Automatically activate CarKit, when the phone is inserted.

## Display indicators


	Strength of incoming signal.
	Charging completed.
	Battery indicator.
	All calls are diverted.
	Ringer off.
	Short ringer (beep) only.
	Ringer only if caller is stored in the Phonebook.
	Alarm is set.
	Alarm clock active.
	Key lock active.
	Transmission unencrypted.
Phone numbers/names:	
	On the SIM card.
	In the phone memory.
	On the SIM card (PIN 2 protected).
	No network access.
	Line 1 active (of 2 lines).
	Function active.
	Unknown network function.
	Phonebook.
<b>abc/Abc</b>	Indicates whether upper or lower-case letters are active.
<b>T9</b>	Text input <b>with</b> T9.
	WAP Offline.
	WAP Online.



	WAP No network.
	Headset mode.
	Loudspeaker Car Kit.
	Auto talk feature on.
	Bitmap.
	Ring tone.

## Soft keys

	Message received.
	Voice mail received.
	Unanswered call.
	SIM memory full.
	Store in Phonebook.
	Retrieve from Phonebook.
	SIM services.
	Switch Car Kit Portable.
	T9 word selection.

If you have any questions about using your phone, visit us at **[www.my-siemens.com/customercare](http://www.my-siemens.com/customercare)** anytime.  
In addition we have listed some frequently asked questions and answers below.

Question	Possible causes	Possible solution
Phone cannot be switched on.	On/Off key not pressed long enough.	 Press On/Off key for at least two seconds.
	Flat battery.	Charge battery. Check charging indicator in the display.
	Battery contacts dirty.	Clean contacts.
	See also below under: "charging error"	
Standby time too short.	Speed search active.	Deactivate speed search (p. 58).
	Display illumination on.	Switch off display illumination (p. 57).
Charging error (charge icon not displayed).	Battery totally discharged.	1) Plug in charger cable. 2) Wait up to 2 hours until the charge icon is displayed. 3) Charge battery as usual.
	Temperature out of range: 5 °C to 40 °C	Make sure the ambient temperature is right, wait a while, then recharge.
	Contact problem.	Check power supply and connection to the phone. Check battery contacts and device interface, clean them if necessary, then insert battery again.
	No mains voltage.	Plug in to a different socket or check voltage.
	Wrong charger.	Only use original Siemens accessories.
	Battery fault.	Replace battery.
SIM error.	SIM card not correctly inserted.	Make sure that the SIM card is correctly inserted (p. 6).
	SIM card contacts dirty.	Clean the SIM card with a dry cloth.
	SIM card with wrong voltage.	Use 3 V SIM cards only.
	SIM card damaged (e.g. broken).	Inspect the damage. Return the SIM card to service provider.

Question	Possible causes	Possible solution
No connection to network.	Signal weak. Outside GSM range. SIM card not valid. New network not authorised. Network barring is set. Network overloaded.	Move higher, to a window or open space. Check service provider coverage map. Reclaim at the service provider. Try manual selection or select a different network (p. 59). Check barrings (p. 59). Try again later.
Phone loses network.	Signal too weak.	Reconnection to another service provider is automatic (p. 59). Switching the phone on and off may speed this up.
Calls not possible.	2nd line set. New SIM card inserted. Charge limit reached. Credit used up.	Set line 1  (p. 59). Check for new restrictions. Reset limit with PIN 2 (p. 58). Load credit.
Certain uses of the phone not possible.	Call restrictions are set.	Barrings may have been set by your service provider. Check barrings (p. 59).
Entries cannot be made in Phonebook.	Phonebook is full.	Delete entries in Phonebook (p. 20).
Voice mail does not work.	Call divert to the mailbox not set.	Set call divert to the mailbox (p. 43).
SMS (text message)  flashes.	SMS memory full.	Delete messages (SMS) to make room (p. 28).
Function cannot be set.	Not supported by your service provider or registration required.	Contact your Service Provider.
Charge counter does not work.	Charge pulse not transmitted.	Contact your Service Provider.

Question	Possible causes	Possible solution
Message cannot be sent.	<p>Service provider does not support this service.</p> <p>Phone number of the service centre is not set or is wrong.</p> <p>SIM card contract does not support this service.</p> <p>Service centre overloaded.</p> <p>Addressee does not have a compatible phone.</p>	<p>Check with your Service Provider.</p> <p>Set service centre (p. 34).</p> <p>Contact your Service Provider.</p> <p>Repeat message.</p> <p>Check.</p>
PIN error/ PIN 2 error.	Three wrong entries.	Enter the PUK (MASTER PIN) provided with the SIM card according to the instructions. If the PUK (MASTER PIN) has been lost, contact your service provider.
Phone code error.	Three wrong entries.	Contact Siemens Service (p. 67).
Service provider code error.	No authorisation for this service.	Contact your Service Provider.
Too few/too many menu entries.	Functions may have been added or removed by the service provider via the SIM card.	Check with your Service Provider.
<b>Damage</b>		
Severe shock.	Remove battery and SIM and insert them again. Do not dismantle the phone.	
Phone became wet.	<p>Remove battery and SIM card. Dry immediately with cloth, do not heat.</p> <p>Dry connector contacts thoroughly. Stand unit upright in an air current.</p> <p>Do not dismantle the phone.</p>	

**Reset settings to the factory default: \* # 9 9 9 9 #** 

Simple, straightforward support for technical and operational queries is available from our online support service on the Internet:  
**[www.my-siemens.com/customer-care](http://www.my-siemens.com/customer-care)**  
or in the "Questions & Answers" section (p. 64) of this User Guide.

If repair work is necessary, please contact one of our service centres:

Abu Dhabi .....	0 26 42 38 00
Argentina .....	0 80 08 88 98 78
Australia .....	18 00 62 24 14
Austria .....	05 17 07 50 04
Bahrain .....	40 42 34
Bangladesh .....	0 17 52 74 47
Belgium .....	0 78 15 22 21
Bosnia Herzegovina .....	0 33 27 66 49
Brazil .....	0 80 07 07 12 48
Brunei .....	02 43 08 01
Bulgaria .....	02 73 94 88
Cambodia .....	12 80 05 00
Canada .....	1 88 87 77 02 11
China .....	0 21 50 31 81 49
Croatia .....	0 16 10 53 81
Czech Republic .....	02 33 03 27 27
Denmark .....	35 25 86 00
Dubai .....	0 43 96 64 33
Egypt .....	0 23 33 41 11
Estonia .....	06 30 47 97
Finland .....	09 22 94 37 00
France .....	01 56 38 42 00
Germany * .....	0 18 05 33 32 26
Greece .....	0 80 11 11 11 16
Hong Kong .....	28 61 11 18
Hungary .....	06 14 71 24 44
Iceland .....	5 11 30 00
India .....	01 13 73 85 89 - 98
Indonesia .....	0 21 46 82 60 81
Ireland .....	18 50 77 72 77
Italy .....	02 66 76 44 00
Ivory Coast .....	80 00 03 33
Jordan .....	0 64 39 86 42
Kenya .....	72 37 17

Kuwait .....	2 45 41 78
Latvia .....	7 50 11 14
Lebanon .....	01 44 30 43
Libya .....	02 13 50 28 82
Lithuania .....	8 22 74 20 10
Luxembourg .....	43 84 33 99
Macedonia .....	02 13 14 84
Malaysia .....	03 21 63 11 18
Malta .....	00 35 32 14 94 06 32
Mauritius .....	2 11 62 13
Morocco .....	22 66 92 32
Netherlands .....	0 90 03 33 31 00
New Zealand .....	08 00 27 43 63
Norway .....	22 70 84 00
Oman .....	79 10 12
Pakistan .....	02 15 66 22 00
Philippines .....	0 27 57 11 18
Poland .....	08 01 30 00 30
Portugal .....	8 00 85 32 04
Qatar .....	04 32 20 10
Romania .....	0 12 04 60 00
Russia .....	09 57 37 29 52
Saudi Arabia .....	0 22 26 00 43
Serbia .....	01 13 22 84 85
Singapore .....	62 27 11 18
Slovak Republic .....	02 59 68 22 66
Slovenia .....	0 14 74 63 36
South Africa .....	08 60 10 11 57
Spain .....	9 02 11 50 61
Sweden .....	0 87 50 99 11
Switzerland .....	08 48 21 20 00
Taiwan .....	02 25 18 65 04
Thailand .....	0 22 68 11 18
Tunisia .....	0 71 86 19 02
Turkey .....	0 21 65 79 71 00
Ukraine .....	8 80 05 01 00 00
United Arab Emirates .....	0 43 31 95 78
United Kingdom .....	0 87 05 33 44 11
USA .....	1 88 87 77 02 11
Vietnam .....	45 63 22 44
Zimbabwe .....	04 36 94 24

\* 0.12 Euro/Minute

## Declaration of conformity

Siemens Information and Communication mobile hereby declares that the phone described in this user guide is in compliance with the essential requirements and other relevant provisions of European Directive 1999/5/EC (R&TTE).

The declaration of conformity (DoC) concerned has been signed. Please call the company hotline if you require a copy of the original.

**CE 0682**

## Technical data

GSM class:	4 (2 Watt)
Frequency range:	880 - 960 MHz
GSM class:	1 (1 Watt)
Frequency range:	1.710 - 1.880 MHz
Weight:	97 g
Dimensions:	109 x 46 x 23 mm (85 ccm)
Operating voltage:	3.6 Volt
Operating temperature:	-10 °C to 55 °C
Standby time:	60 h - 250 h
Talk time:	100 min - 300 min
SIM card:	3.0 Volt
SAR:	0.98 W/kg*

\*This applies to the phone together with the front and back covers and keyboard supplied with the phone.

## Maintenance tips

- The SIM card should be treated with the same care as a cheque guarantee card. Do not bend or scratch it or expose it to static electricity.
- Clean the card with a damp cloth or an anti-static wipe without chemical cleaning agents.
- Protect the phone from moisture and shocks. Do not expose your phone to direct sunlight.
- Remove the battery if you are not going to use the phone for extended periods of time (more than one month).
- Quality declaration for battery (p. 8).

### Phone ID

You will need the following details if you lose your phone or SIM card. Please enter here the number of the SIM card (on the card):

.....

15-digit serial number of the phone (under the battery):

.....

Customer Service number of the service provider:

.....

### Lost phone

If you lose your phone and/or SIM card, contact your service provider immediately to prevent misuse.

## Basics

### Li-Ion Battery (600mAh)

L36880-N4701-A112

### Travel Charger

L36880-N4001-A103 (Euro)

L36880-N4001-A104 (UK)

### Desk Top Charger

L36880-N4501-A101

Enables simultaneous charging of the phone battery and a spare battery.

### Headset PTT

L36880-N4001-A123

### Car Charger

L36880-N4001-A108

### Mobile Holder

L36880-N4501-A102

### Mobile Holder Antenna

L36880-N4501-A103

Mobile holder for connecting an outdoor antenna. Ideal in combination with the Headset PTT or the Car Kit Portable.

### Carry Set

L36880-N4701-A101

Features a belt clip and a clip for fastening the phone to clothes or bags.

### Basic Car Pack

L36880-N4501-A107

Allows handsfree talking and simultaneously charges the mobile phone in the car.

## CLIPit™ Covers

Exchangeable top and bottom shell.

- |                  |                   |
|------------------|-------------------|
| • Silver Magenta | L36880-N5111-A100 |
| • Silver Lemon   | L36880-N5111-A101 |
| • Silver Orange  | L36880-N5111-A102 |
| • Silver Horizon | L36880-N5111-A103 |
| • Silver Forest  | L36880-N5111-A104 |
| • Silver Earth   | L36880-N5111-A105 |

## Carrying Cases

- |                   |                   |
|-------------------|-------------------|
| • Leather Holster | L36880-N4001-A154 |
| • Belt Case       | L36880-N4801-A116 |
| • Neoprene Case   | L36880-N4001-A155 |
| • Grip Case       | L36880-N4501-A132 |
| • Loop Case       | L36880-N4501-A133 |
| • Leather Case    | L36880-N4501-A131 |
| • Shoulder Bag    | L36880-N4001-A149 |

You will find the my-CLIPit™ service, for personalising the front and back of your A50 with your own photos for example, at:  
**[www.my-siemens.com/my-clipit](http://www.my-siemens.com/my-clipit)**

## Car Solutions

### Car Kit Portable

L36880-N3015-A117

Hands-free kit with integrated loudspeaker and microphone and auto talk feature. Simply plug into the cigarette lighter socket. Ideal for mobility between vehicles.

Products can be obtained in specialist shops. Visit our online shop under:



Original Siemens accessories

**[www.siemens.com/  
mobilestore](http://www.siemens.com/mobilestore)**

The A50 offers you numerous options for personalisation, i.e. individual configuration to suit your own specific tastes. For example you can have operator graphics as bitmaps \* or screensavers sent via SMS to your mobile phone. SMS can also be used to send sounds as ring tones to your A50.

The Siemens City Portal offers numerous ring tones, screensavers and operator bitmaps \*.

You will find the City Portal in the Internet under:

**[www.my-siemens.com/city](http://www.my-siemens.com/city)**

The portal also includes a list of countries where this service is available.

The following pages in the User Guide describe the relevant download process:

Ring tones .....	p. 55
Screensaver.....	p. 57
Operator bitmaps * .....	p. 57

\* An operator bitmap is a graphic which can be loaded into the display of the mobile telephone in place of the network operator designation and will appear there permanently. This graphic is however linked to the network of the operator concerned and is not usually displayed during roaming (e.g. when you are logged on abroad to the network of another provider).

In addition you can choose another colour for the top or bottom cover or even use a personal photo in JPEG format to make your A50 unique. To make it easier for you to do this, you can choose one of a number of templates that best suits your requirements. Naturally you can also create the front and back of your mobile telephone entirely as you wish.

If you want to load another dictionary (T9 language version) to make it easier to write SMS messages in another language, you will find a large choice of dictionaries for downloading via the internet as well as the relevant installation notes at:

**[www.my-siemens.com/t9](http://www.my-siemens.com/t9)**

## THIS PHONE MEETS THE EU REQUIREMENTS FOR EXPOSURE TO RADIO WAVES.

Your mobile phone A50 is a radio transmitter and receiver. It is designed and manufactured not to exceed the limits for exposure to radio frequency (RF) energy recommended by The Council of the European Union. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines were developed by independent scientific organisations through periodic and thorough evaluation of scientific studies. The limits include a substantial safety margin designed to assure the safety of all persons, regardless of age and health.

The exposure standard for mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit recommended by The Council of the European Union is 2.0 W/kg.\* Tests for SAR have been conducted using standard operating positions with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the

closer you are to a base station antenna, the lower the power output.

Before a phone model is available for sale to the public, compliance with the European R&TTE directive must be shown. This directive includes as one essential requirement the protection of the health and the safety for the user and any other person. The highest SAR value for this model phone A50 when tested for compliance against the standard was 0.98 W/kg. While there may be differences between the SAR levels of various phones and at various positions, they all meet the EU requirements for RF exposure.

- 
- \* The SAR limit for mobile phones used by the public is 2.0 watts/kilogram (W/kg) averaged over ten grams of tissue. The limit incorporates a substantial margin of safety to give additional protection for the public and to account for any variations in measurements. SAR values may vary depending on national reporting requirements and the network band. For SAR information in other regions please look under product information at **[www.my-siemens.com](http://www.my-siemens.com)**

## THIS PHONE MEETS REQUIREMENTS FOR EXPOSURE TO RADIO WAVES.

Your mobile phone A50 is a radio transmitter and receiver. It is designed and manufactured not to exceed the limits for exposure to radio frequency (RF) recommended by international guidelines (ICNIRP). These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines were developed by independent scientific organisations through periodic and thorough evaluation of scientific studies. The guidelines include a substantial safety margin designed to assure the safety of all persons, regardless of age and health.

The exposure standard for mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit stated in the international guidelines is 2.0 W/kg\*. Tests for SAR are conducted using standard operating positions with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a base station, the


lower the power output of the phone.

The highest SAR value for this model phone A50 when tested for use at the ear is 0.98 W/kg. While there may be differences between the SAR levels of various phones and at various positions, they all meet the relevant international guidelines for RF exposure.

---

\* The SAR limit for mobile phones used by the public is 2.0 watts/kilogram (W/kg) averaged over ten grams of body tissue. The guidelines incorporate a substantial margin of safety to give additional protection for the public and to account for any variations in measurements. SAR values may vary depending on national reporting requirements and the network band. For SAR information in other regions please look under product information at **[www.my-siemens.com](http://www.my-siemens.com)**

**A**

Accessories .....	69
Aircraft mode .....	52
Alarm clock .....	50
All calls (divert) .....	48
All incoming calls .....	47
All outgoing calls .....	47
Allow only  .....	58
Answering service (external) .....	43
Audio .....	55
Auto answer (in the car) .....	61
Auto display (CB) .....	44
Auto display (time/date) .....	50
Auto network .....	59
Auto redial .....	13
Automatic switch off (telephone) .....	50

**B**

Babysitter .....	17, 58
Balloon Shooter (Game) .....	40
Band selection .....	59
Beep, ringer .....	55
Big letters .....	57
Bitmap style .....	57
Bitmap viewer .....	41
Bitmap, load .....	41
Bottom cover .....	69
Browser (WAP) .....	36

**C**

Call	
accept/end .....	12
charges .....	47
holding .....	15
menu .....	16
not possible .....	10
reject .....	14
several simultaneously .....	14
Call back .....	13
Call divert .....	48

Call lists .....	46
Call screening .....	55
Call to group .....	23
Call transfer .....	15
Call waiting .....	61
Calling faces .....	26
Calling symbol .....	26
Calls dialled (call list) .....	46
Calls missed (call list) .....	46
Calls received .....	46
Car kit accessories .....	62
Car solutions .....	69
Casing	
changing .....	5
CB languages .....	45
CB services .....	44
Change phonecode .....	58
Change PIN .....	58
Change PIN2 .....	58
Charge display .....	47
Charge settings	
A/c limit .....	47
All calls .....	47
Auto display .....	47
Currency .....	47
Incoming calls .....	47
Personal rate .....	47
Charging (battery) .....	7
Choose melody .....	55
Choose network .....	59
City Portal .....	70
Clear all (divert) .....	49
CLIPit .....	69
CLIPit™ Covers .....	5, 69
changing .....	5
Clock .....	50
Codes .....	11
Conceal ID .....	61
Conference .....	15
Confidential numbers .....	11, 58

Configuration (network) ..... 59  
 Connection (2nd phone number) 59  
 Connection, select ..... 59  
 Contrast (display) ..... 57  
 Control codes (DTMF) ..... 16, 25

**D**

Date format ..... 50  
 Display  
     big letters ..... 57  
     contrast ..... 57  
     settings ..... 57  
 Display symbols ..... 63  
 Divert ..... 48  
 Download ..... 39, 70  
 DTMF tones ..... 16  
 During a call (Setup) ..... 61

**E**

E-mail via SMS ..... 34  
 Emergency call ..... 10  
 Erase records ..... 46

**F**

Factory settings ..... 58  
 Fast access ..... 53  
 Fast search (network) ..... 58  
 Fax via SMS ..... 34

**G**

Games ..... 40  
 Getting started ..... 6  
 Greeting ..... 57

**H**

Handset volume ..... 14  
 Headset ..... 61  
 Holding a call ..... 15  
 Home network ..... 59  
 Homepage (Internet) ..... 35

**I**

Illumination ..... 57  
 IMEI number ..... 58  
 Information services (CB) ..... 44  
 Information tones ..... 56  
 Input language ..... 58  
 International prefix ..... 12  
 Internet (WAP) ..... 35

**K**

Key tone ..... 56

**L**

Language (display) ..... 57  
 Last call ..... 47  
 Limit (charge) ..... 47  
 Loss of phone, SIM card ..... 68

**M**

Mailbox ..... 43  
 Maintenance of the phone ..... 68  
 Melody Manager ..... 42  
 Melody, choose ..... 55  
 Menu  
     control ..... 9  
     speed dialling ..... 54  
 Message (SMS) ..... 27  
 Microphone on/off ..... 16, 24  
 my-CLIPit™ ..... 69

**N**

Net operator ..... 59  
 Network  
     fast search ..... 58

Network barring .....	60
All incoming .....	60
All outgoing .....	60
Clear all .....	60
Outgoing international .....	60
Outgoing international without home .....	60
Status check .....	60
When roaming .....	60
Network info. ....	59
New SMS .....	29
Noisy environ. (profile) .....	51
Norm. environ. (profile) .....	51

## O

Operating times .....	7
Operator bitmaps .....	70
Outbox (SMS) .....	28
Overview (Phone) .....	4
Own numbers .....	18

## P

Phone (Overview) .....	4
Phone identity number (IMEI) ....	58
Phone memory .....	24
Phonebook	
call entry .....	20
group .....	21
input aid .....	18
insert picture .....	26
new entry .....	18
store control code (DTMF) ....	25
Phonecode .....	11
Picture & sound .....	30
PIN	
change .....	11
enter .....	10
error .....	66
PIN 2 .....	11
PIN control .....	58
Predefined text .....	30

Preferred network .....	60
Prefix .....	12
Prevent new SIM .....	58
Profiles .....	51
PUK .....	11

## Q

Quality declaration for battery .....	8
Quiet environ. (profile) .....	51

## R

Read new CB .....	44
Record number .....	25
Redial .....	13
Remain. units .....	47
Reminder .....	13
Ring tone .....	55
Ringer	
deactivate .....	55
setting .....	55

## S

Safety precautions .....	3
Screensaver .....	57
Second phone number .....	59
Security .....	11, 59
Service centre .....	34
Setup	
network .....	59
Setup (games) .....	40
Setup (profile) .....	51
Siemens Service .....	67
Silent alert .....	56
SIM services .....	10, 45

SMS		
capacity .....	28	
delivery confirmation .....	28	
insert picture .....	29, 30	
setup .....	34	
status report .....	34	
T9 input .....	29	
to group .....	22	
Soft keys		
function .....	9	
set .....	53	
SOS .....	10	
Special characters .....	19, 31	
Specific divert		
Busy .....	48	
No reply .....	48	
Unreachable .....	48	
Speed dialling numbers .....	54	
Stack Attack (Game) .....	40	
Standby mode .....	10	
Standby time .....	7	
Status .....	58	
Status check (divert) .....	49	
Swapping .....	14	
Switching off phone .....	10	
Switching on phone .....	10	
Symbols .....	63	
<b>T</b>		
T9		
activate, deactivate .....	29	
text entry .....	31	
T9 input .....	58	
T9 preferred .....	58	
Technical data .....	68	
Text entry .....	19, 31	
Text message .....	27	
Text message (SMS) .....	27	
Time/charge .....	47	
Time/date .....	50	
Top cover .....	69	
Topic index (CB) .....	45	
Topic list (CB) .....	44	
Troubleshooting .....	64	
<b>U</b>		
Unanswered calls (divert) .....	48	
Upper-, lowercase .....	19, 31, 32	
<b>V</b>		
Validity period (SMS) .....	34	
Voice message .....	43	
Volume (ringer) .....	55	
<b>W</b>		
WAP .....	35	
Internet access .....	35	
profiles .....	37	
setup .....	37	